

Beverage Fountain Instructions:

This beverage fountain is designed to circulate **ONLY clear beverages. Use of liquids with fruit, pulp, seeds, rind, etc. will restrict the flow of liquid and may give unsatisfactory results. Use of ice cream or other foamy punches may also restrict the flow of the beverage. **

Operating Instructions:

- Pour approximately two quarts of beverage in lower reservoir and turn switch on.
- If beverage does not circulate within one minute, turn switch off for 10 seconds, then turn back on.
- You may need to repeat this procedure several times until the beverage starts to flow freely.
- Add more of the beverage as needed.

Important: Do not run fountain dry. Do not immerse base of fountain in water. Carry by base only.

Cleaning Instructions:

After use, empty out remaining beverage and fill lower reservoir with two gallons of warm water and let circulate for five (5) minutes. Empty the unit and repeat.

DO NOT TAKE UNIT APART!!!

DO NOT use scouring pads or any type of abrasive material or cleaning product.

Helpful Beverage Hints:

- The machine is not designed to chill beverages so make sure your drink is cold before putting it into the fountain.
- Chill beverages with ice cubes in a plastic bag, or with chunks of ice or dry ice in the fountain.
- It is recommended to chill beverages to 36° F before adding them to the fountain.
- When using carbonated beverages, Carbonation will dissipate after 10-20 minutes of recirculation in the fountain. It's a good idea to place bags of ice enclosed in plastic in the fountain bowl, to avoid dilution. It is advisable to add smaller quantities of carbonated mixtures to the fountain from time to time to maintain carbonation.

