

# **SWH Party Rentals Sno-Kone Machine Instruction Manual:**

## **SAFETY PRECAUTIONS:**

- Machine must be properly grounded to prevent electrical shock to personnel. Failure to do so could result in serious injury, or death.
- DO NOT immerse any part of this equipment in water. DO NOT use excessive water when cleaning.
- Keep cord and plug off the ground and away from moisture.
- Always unplug the equipment before cleaning or servicing.
- Make sure all machine switches are in the OFF position before plugging the equipment into the receptacle.
- NEVER put your fingers into the shaver body (the goose-neck, ice chute, or hopper). Serious Injury may occur. This machinery contains sharp blades. Keep hands and body parts clear at all times.
- This machine is NOT to be operated by minors.

## **OPERATING INSTRUCTIONS:**

- Make sure all machine switches are in the OFF position before plugging the equipment into the receptacle.
- Make sure the wall outlet can accept the grounded plugs (where applicable) on the power supply cord.
- Install the unit in a level position.

### **To Operate the Sno-Konette:**

- Fill the hopper to within an inch from the top with ice cubes or block ice (no larger than 3 to 4 inches). The larger the pieces, the better the snow.
- Switch the motor on, and wait for it to reach full speed (this will take a minute or so).
- Press the pusher handle down against the ice in the hopper. Apply firm and even pressure to make the best snow. You may find that you need to relieve the pressure two or three times during a cycle. Too much pressure will result in snow that is coarse; too little pressure will make the snow mushy.

### **Ice Requirements:**

- The Sno-Konette can take ice cubes or block ice, if you break the block into pieces approximately 3 to 4 inches in size.
- NOTE: The ice will not enter the shaving chute if the pieces are too large.

## **CLEANING INSTRUCTIONS:**

1. With the machine OFF, unplug the unit before attempting to clean.
2. Empty water from pans and clean using appropriate cleaners for the type of machine; review all manufacturer's instructions and warnings on cleaning product prior to use.
  - DO NOT use oven cleaners or abrasive materials as they will damage parts of the machine.
  - DO NOT use Ammonia cleaners, they will damage plastic panels.